
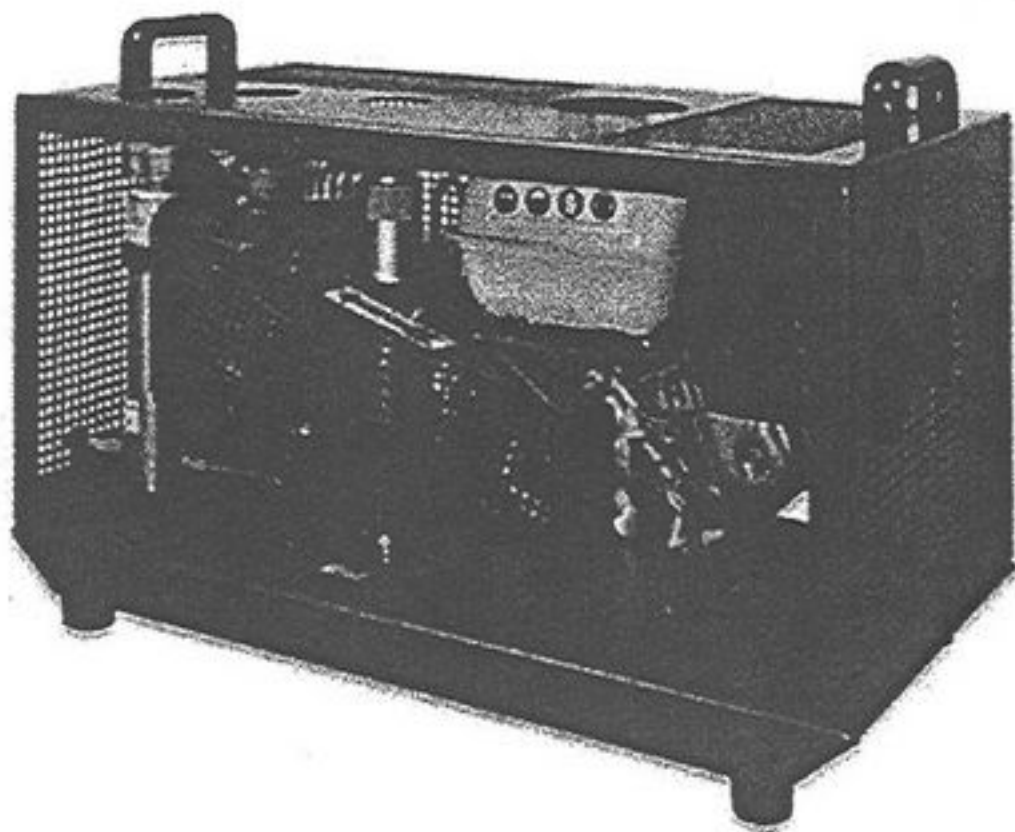
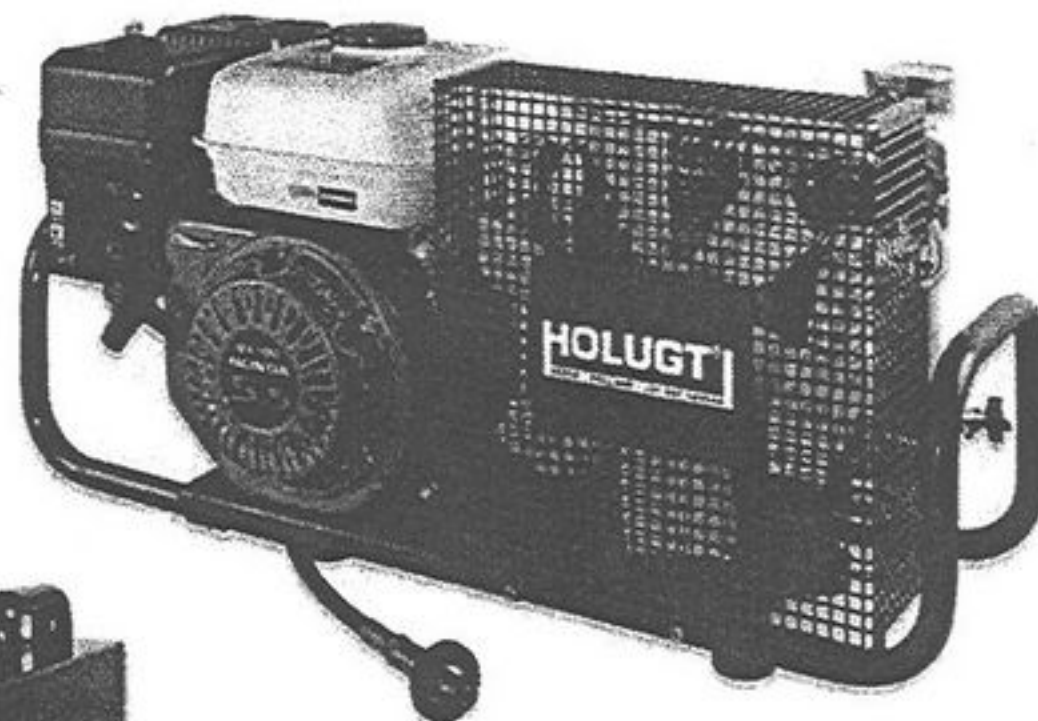


HOLUGT®

COMPRESSOREN

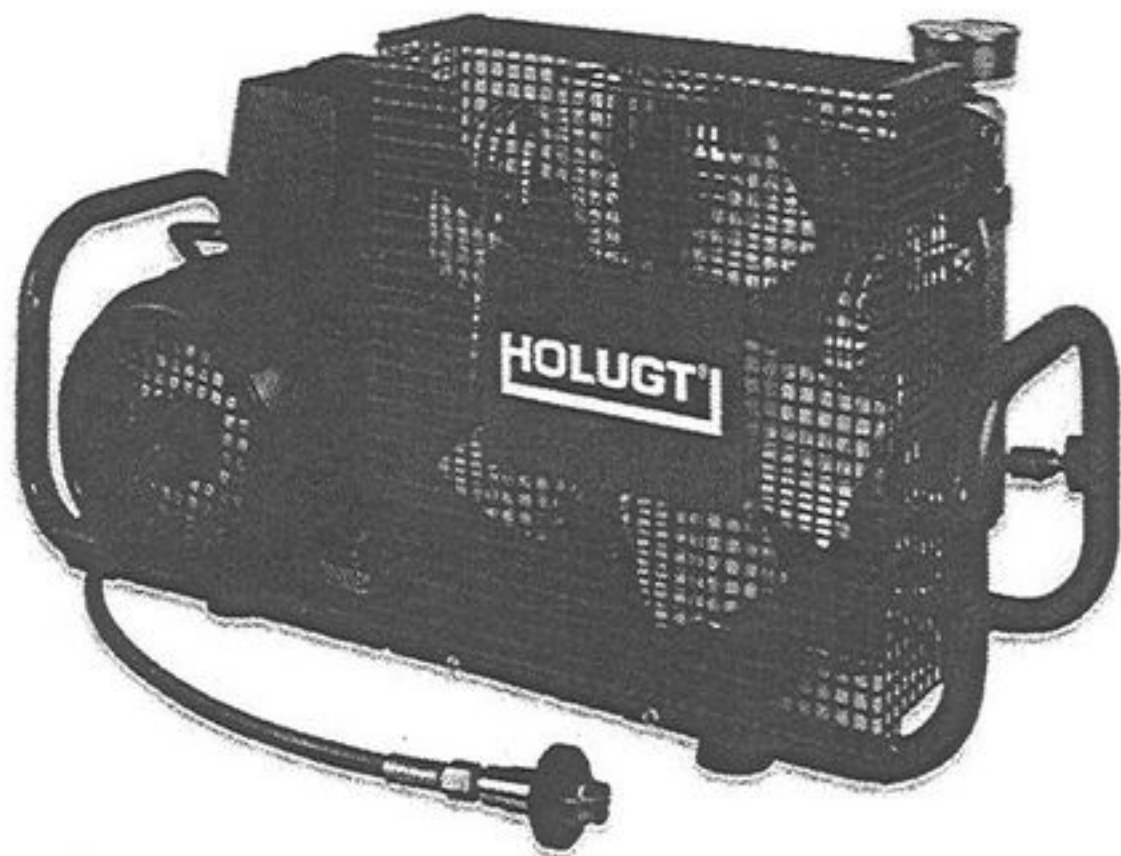

HL 110 SERIES PORTABLE BREATHING AIR COMPRESSOR

OPERATION AND MAINTENANCE MANUAL

ID Nr.	Part Number	Description
1	65200101	Pressure gauge HL110
2	65200102	Separator Upper Lid
3	65200103	O-Ring
4	65200104A	Safety valve 200 bar YELLOW
4	65200104B	Safety valve 300 bar RED
5	65200105	Condensation separator
6	65200106	Elbow, 6 1/8 90°
7	65200107	Tube, diameter 6
8	65200108	Clamp
9	65200109	Allen Screw
10	65200110	Washer
11	65200111	Nut
12	65200112	Fitting 6-1/8 diameter
13	65200113	Tube (S shape), 6 mm diameter
14	65200114	Filter Bottom Cap
15	65200115	Condensate drain
16	65200116	Separator Diffuser
17	65200117	Filter bottom cap
18	65200118	Filter Top Cap
20	65200120	MC / AC / HC Active End Filter
21	65200121	Filter house
22	65200122	Screw
23	65200123	Fill Whip (4 ft - 1.25 m)
24	65200124A	DIN 2000 PSI filling fitting (200 bar)
24	65200124B	DIN 3000 PSI filling fitting (300 bar)
25	65200125	Int. connector 7/16 with yoke
26	65200126	Filter Clamp
27	65200127	Filter Spring